* MANUAL OF USE OF THE VOIP PHONE SNOM 300

Snom 300 synthetic manual

For information or assistance please contact us at voip-support@unipa.it

FAQ	

NR appears on the display and I can not call
Your phone is not registered on the server. Disconnect the power supply and reconnect it. If your phone does not return to work, contact us at <u>voip-support@unipa.iT</u>
Letters are displayed on the display when dialing a number
Handset raised, press several times At the bottom left you alternate abc, ABC, 123 . Stop on 123
I type the number but the keyboard is locked, at the bottom right there is a lock
Keyboard is locked , handset hooked press * (asterisk) for four seconds, on request enter the four-digit password followed by . The password can be requested by sending an email to <u>voip-support@unipa.it</u>

FUNCTIONS
Lock the keyboard
Handset hooked, press * (asterisk) for four seconds, a padlock will appear on the bottom right display
Unlock the keyboard
Handset hooked, press * (asterisk) for four seconds, on request enter the password of four numbers followed by . The password can be requested by sending an email to <u>voip-support@unipa.it</u>
Lost/incoming/outgoing call list
Hooked handset, for call menu. to select between Lost > Entrants > Exiting and confirm. To scroll backwards, , select the call option to confirm the call.

Change the ringtone
Hooked handset Hooked
Listen to voice mails
Press *97 vype the password followed by the key # . Follow the directions of the recorded item. The password and activation of the service can be requested sending an email to <u>voip-support@unipa.it</u>
Transfer a call
During the call or while the phone rings press $T_{transfer}$ followed by the number of the interior to transfer the call and \checkmark to confirm, wait for the answer, press again $T_{transfer}$ and hang up to complete.
View IP address
Hooked handset